



BEFORE CONSTRUCTION

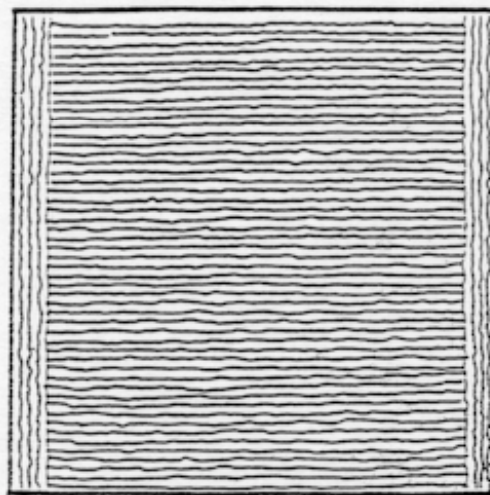


AFTER CONSTRUCTION

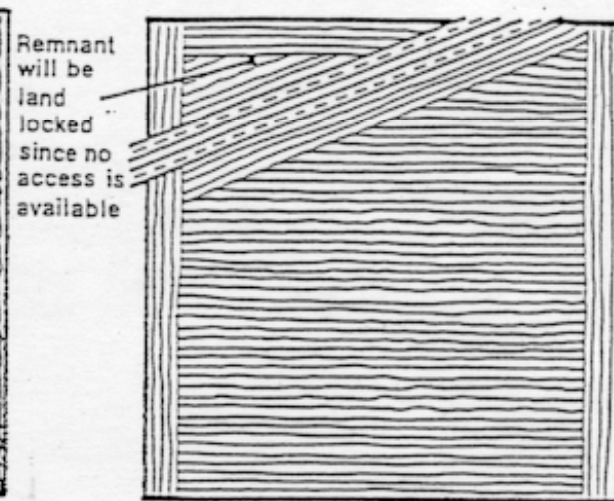


LAND LOCKED PARCEL

BEFORE CONSTRUCTION

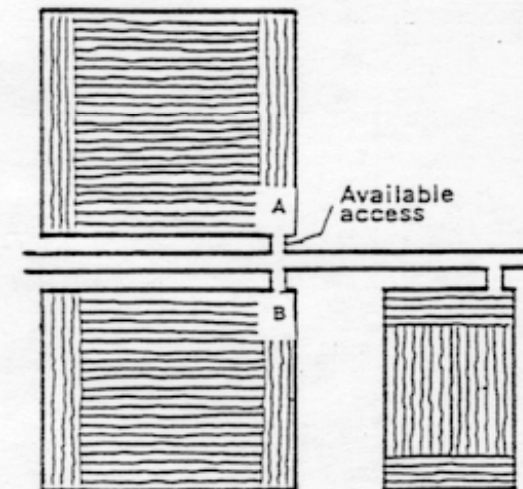


AFTER CONSTRUCTION

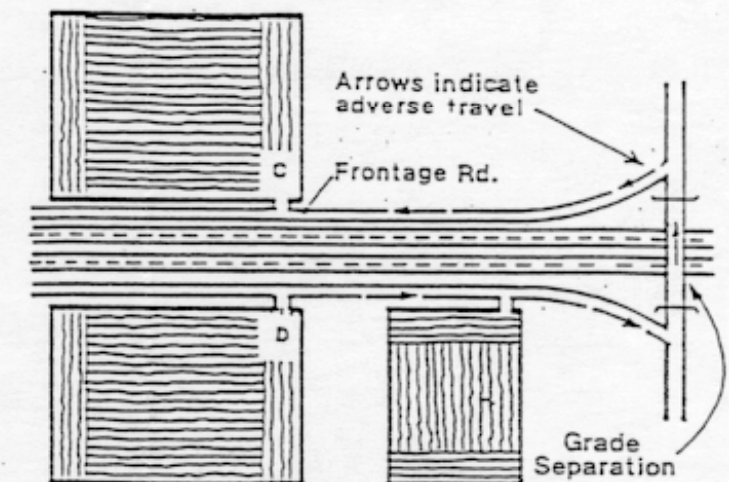


OPERATIONS AFFECTED BY ADVERSE TRAVEL

NO DIRECT ACCESS - USUALLY RESULTS IN ADVERSE TRAVEL FOR OPERATOR

BEFORE CONSTRUCTION

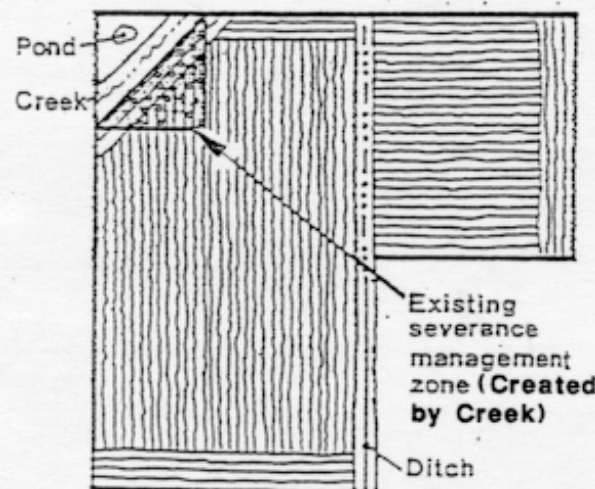


AFTER CONSTRUCTION

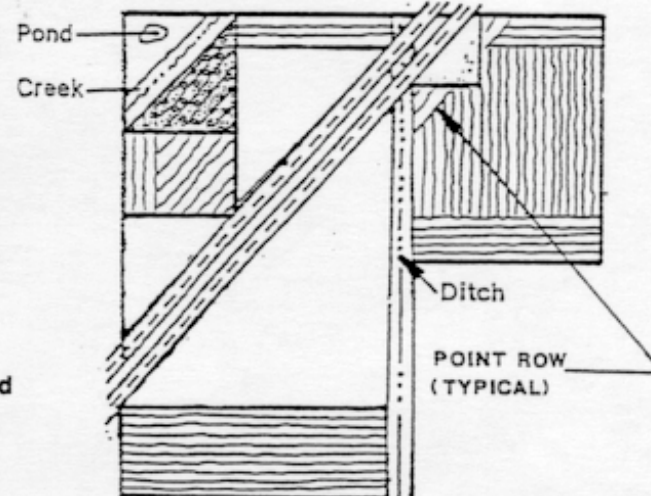


SEVERANCE MANAGEMENT ZONE

EXISTING NEW


BEFORE CONSTRUCTION

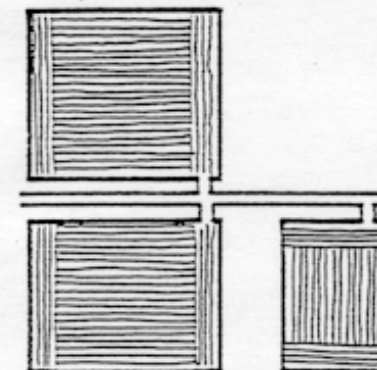

AFTER CONSTRUCTION

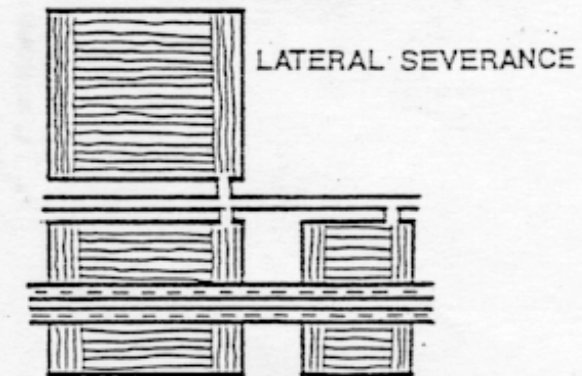

AFTER CONSTRUCTION

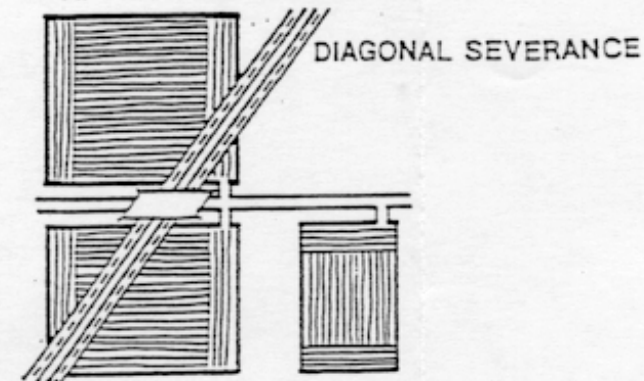

SEVERED FARM OPERATION

FAP ROUTE 340  
ILLUSTRATION OF TERMS  
USED IN AGRICULTURE  
IMPACT ANALYSIS  
FREEWAY DESIGN